



Lp	A	Ilość wrzec.	Nr handlowy
1	13	2	GLN-13-2-0-X-X-X
2	14	3	GLN-14-3-0-X-X-X
3	15	3	GLN-15-3-0-X-X-X
4	16	3	GLN-16-3-0-X-X-X
5	16	5	GLN-16-5-0-X-X-X
6	16	7	GLN-16-7-0-X-X-X
7	17	2	GLN-17-2-0-X-X-X
8	17	3	GLN-17-3-0-X-X-X
9	18	3	GLN-18-3-0-X-X-X
10	20	3	GLN-20-3-0-X-X-X
11	20	5	GLN-20-5-0-X-X-X
12	20	7	GLN-20-7-0-X-X-X
13	21	3	GLN-21-3-0-X-X-X
14	21	5	GLN-21-5-0-X-X-X
15	22	3	GLN-22-3-0-X-X-X
16	22	5	GLN-22-5-0-X-X-X
17	23	3	GLN-23-3-0-X-X-X
18	23	5	GLN-23-5-0-X-X-X
19	24	3	GLN-24-3-0-X-X-X
20	24	5	GLN-24-5-0-X-X-X
21	25	3	GLN-25-3-0-X-X-X
22	25	5	GLN-25-5-0-X-X-X
23	26	3	GLN-26-3-0-X-X-X
24	26	5	GLN-26-5-0-X-X-X
25	27	3	GLN-27-3-0-X-X-X
26	27	5	GLN-27-5-0-X-X-X

Lp	A	Ilość wrzec.	Nr handlowy
27	28	3	GLN-28-3-0-X-X-X
28	28	5	GLN-28-5-0-X-X-X
29	29	5	GLN-29-5-0-X-X-X
30	30	3	GLN-30-3-0-X-X-X
31	30	5	GLN-30-5-0-X-X-X
32	30	7	GLN-30-7-0-X-X-X
33	30	9	GLN-30-9-0-X-X-X
34	31	3	GLN-31-3-0-X-X-X
35	31	5	GLN-31-5-0-X-X-X
36	32	3	GLN-32-3-0-X-X-X
37	32	4	GLN-32-4-0-X-X-X
38	32	5	GLN-32-5-0-X-X-X
39	32	6	GLN-32-6-0-X-X-X
40	32	7	GLN-32-7-0-X-X-X
41	32	9	GLN-32-9-0-X-X-X
42	32	11	GLN-32-11-0-X-X-X
43	32	13	GLN-32-13-0-X-X-X
44	32	15	GLN-32-15-0-X-X-X
45	32	17	GLN-32-17-0-X-X-X
46	33	3	GLN-33-3-0-X-X-X
47	33	5	GLN-33-5-0-X-X-X
48	34	3	GLN-34-3-0-X-X-X
49	34	5	GLN-34-5-0-X-X-X
50	35	3	GLN-35-3-0-X-X-X
51	35	5	GLN-35-5-0-X-X-X
52	36	3	GLN-36-3-0-X-X-X
53	36	5	GLN-36-5-0-X-X-X
54	37	3	GLN-37-3-0-X-X-X
55	37	5	GLN-37-5-0-X-X-X
56	38	3	GLN-38-3-0-X-X-X
57	38	5	GLN-38-5-0-X-X-X
58	38	7	GLN-38-7-0-X-X-X
59	39	3	GLN-39-3-0-X-X-X
60	39	5	GLN-39-5-0-X-X-X
61	40	3	GLN-40-3-0-X-X-X
62	40	5	GLN-40-5-0-X-X-X
63	41	3	GLN-41-3-0-X-X-X
64	41	5	GLN-41-5-0-X-X-X
65	42	3	GLN-42-3-0-X-X-X
66	42	5	GLN-42-5-0-X-X-X